

ELECTRICAL GAUGES W/PEAK & WARNING

52mm CRYSTAL BLUE SERIES WHITE / AMBER LED DISPLAY

Oil Pressure Gauge

1

BACK VIEW

Red - Constant 12v (+)
Black - Chassis Ground (-)
White - Switched 12v (+)
Orange - Headlight switch 12v (+)

2

The meter stand connection screw

Meter mount

Peak LED Blue

Warning LED Red

3

Warning Light Sold Separately

Double-Sided Tape

Harness

External Warning Light

Warning Light Wire Harness

4

Remove Key From Ignition

Remove Negative Battery Terminal

5

1/8 NPT THREAD

RED
BLACK
WHITE

PRESS SENSOR

6

Detach original element

Engine

Sensor attachment (commercially available)

Thread size 1/8NPT

Oil press Sensor

O-ring

Temperature Sensor

Adapter Plate Sold Separately

7

CONNECTOR FOR SENSOR WIRE

SENSOR WIRE

BLACK CONNECTOR

OIL PRESS SENSOR

BACK VIEW

8

Repalce negative terminal

Insert key to test

Oil / Water Temperature Gauge

1

BACK VIEW

Red - Constant 12v (+)
Black - Chassis Ground (-)
White - Switched 12v (+)
Orange - Headlight switch 12v (+)

2

The meter stand connection screw

Meter mount

Peak LED Blue

Warning LED Red

3

Warning Light Sold Separately

Double-Sided Tape

Harness

External Warning Light

Warning Light Wire Harness

4

TEMP SENSOR

5

Remove Key From Ignition

Remove Negative Battery Terminal

6

Radiator

Upper Hose

Engine Ground

Sensor Attachment

Attach tightly with clamps. (commercially available)

Wind teflon tape. (Screw Size for sensor 1/8 NPT)

Temperature Sensor

Sensor adapter sold separately

*Cut the upper hose and connect the sensor attachment between hoses.

7

CONNECTOR FOR SENSOR WIRE

SENSOR WIRE

BLUE CONNECTOR

TEMP SENSOR

BACK VIEW

8

Repalce negative terminal

Insert key to test