


Premium Tachometer Gauge

Amber/White Display (270° Scale)

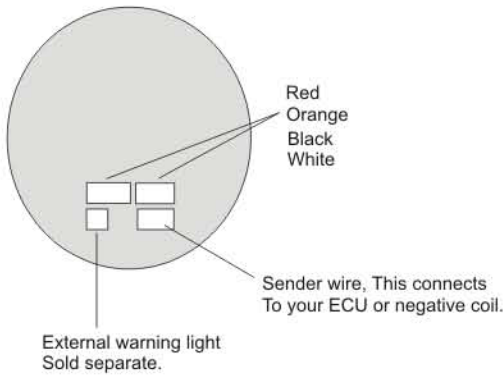

Wiring Instructions

Red- 12v Accessory power (+)

White- 12v Accessory power (+)

Black- Ground negative (-)

Orange-Parking lamp. Meaning a power source that has 12v power when parking lights are turned on.

Sender Wire

ECU Tachometer signal wire

*Note: this is an electronic tachometer and thus requires a square wave electronic signal. This Tachometer is designed for use with 1/2/3/4/5/6/7/8/9 cylinder engines.

Lighting Diagram

Day Time	Night Time	
White	White	White — Connect to acc. Power Amber — Do not connect
Amber	Amber	White — Do not connect Amber — Connect to acc. Power
White	Amber	White — Connect to acc. Power Amber — Connect to parking lamp
Amber	White	White — Connect to acc. Power Amber — Connect to parking lamp

Cylinder. Selector mode:

After opening ceremony is complete,

Press and hold button down for 10 sec.

Cyl. Select mode will appear. Press and


toggle between 1-10 cyl. Once cylinder

Is selected, after 5 sec has passed gauge

will return to normal mode.

Premium Volt Gauge

Amber/White Display (270° Scale)

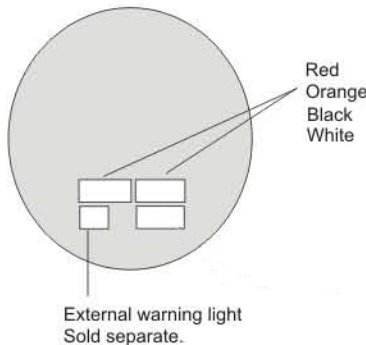

Wiring Instructions

Red- 12v Accessory Power (+)


White- 12v Accessory power (+)

Black- Ground negative (-)

Orange-Parking lamp. Meaning a power source that has 12v power when parking lights are turned on.

Lighting Diagram

Day Time	Night Time	
White	White	White — Connect to acc. Power Amber — Do not connect
Amber	Amber	White — Do not connect Amber — Connect to acc. Power
White	Amber	White — Connect to acc. Power Amber — Connect to parking lamp
Amber	White	Amber — Connect to acc. Power White — Connect to parking lamp

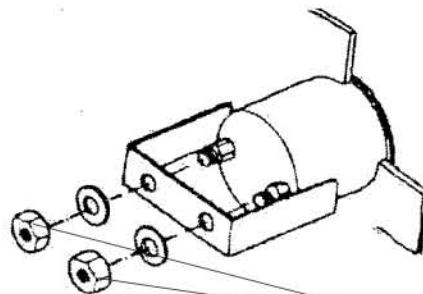

Do not over tighten bolts when installing U bracket. Doing so will cause damage to movement inside.