Performance Fuel Pressure Gauge
Amber/White Display (270° Scale)
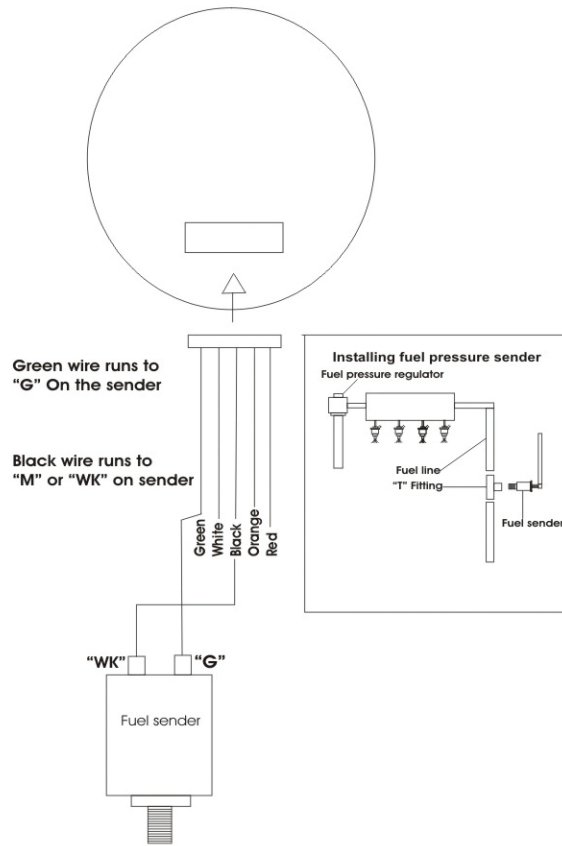
Green wire runs to "G" On the sender

Black wire runs to "M" or "WK" on sender

Green
White
Black
Orange
Red

"WK"   "G"

Fuel sender

Installing fuel pressure sender

Fuel pressure regulator

Fuel line
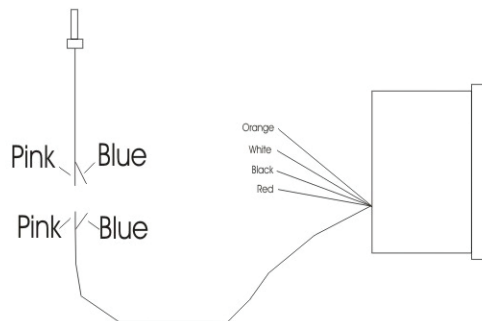"T" Fitting

Fuel sender

Wiring Instructions

Red- 12V Accessory power
Black-Ground
White-Accessory power on
Orange-Headlight switch
(when headlights are turned on, gauge turns amber)
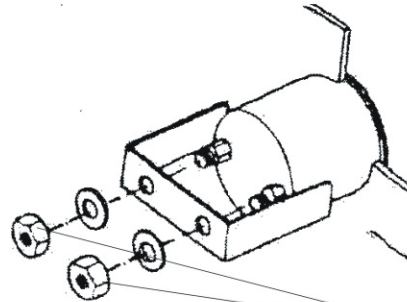
Do not over tighten bolts when installing U bracket. Doing so will cause damage to movement inside.

Performance Exhaust gas temp Gauge
Amber/White Display (270° Scale)

Drill a hole On either position And installing the 1/8 PT thread jointer

Pink   Blue

Pink   Blue

Orange
White
Black
Red

You will need to drill and tap a 1/8th NPT fitting for the probe to go into. We recommend a professional to tap this. Try to avoid shavings from going into the manifold or exhaust.

Wiring Instructions

Red-12v Accessory power
Black- Ground
White- Accessory power on
Orange- Headlight Switch(Once headlights are turned on the gauge turns amber).

Lighting Diagram

Day Time	Night Time	Installation	
White	White	White — Connect to acc. Power	Amber — Do not connect
Amber	Amber	White — Do not connect	Amber — Connect to acc. Power
White	Amber	White — Connect to acc. Power	Amber — Connect to parking lamp
Amber	White	White — Connect to acc. Power	Amber — Connect to parking lamp

WWW.RSPEC.CO.UK